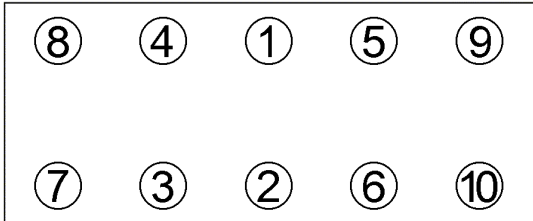


Anziehvorschrift für Zylinderkopf		058.841 passend für / suitable for adaptable à / adaptable a PSA	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
A  B  152.550 M 12x1,5x123			
Anziehen/ Tightening/ Serrage/ Apriete	A * 30 Nm 70 Nm ➤ 120°	B * 20 Nm 60 Nm ➤ 90° ➤ 90°	
Zeichenerklärung / Explanations / Explication / Explicacion			
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C) calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 82 mm; ✱: 1,50 mm; 4 Kerben Mot: XUD7, 161, 161A, A9A 1,7-1,8 Ltr. Diesel 43-44 kW (58-60 PS) Berlingo, BX, C15, Visa, Xsara, ZX, 205, 306, Partner			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*058.841*	