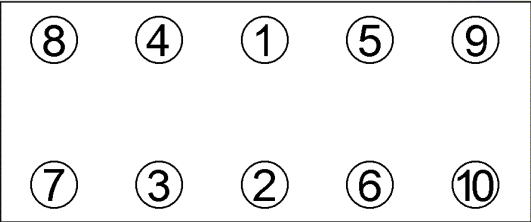


Anziehvorschrift für Zylinderkopf		436.651 passend für / suitable for adaptable à / adaptable a PSA	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo A  B 	Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete 
--	---

Anziehen/ Tightening/ Serrage/ Apriete	A: * 60 Nm ☐ 20 Nm + 120° ★ 15 min ● 120 min ☐ 20 Nm + 120°	B: * 60 Nm ☐ 20 Nm + 300°
---	--	--

Zeichenerklärung / Explanations / Explication / Explicacion

★	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor Ø: 84,5 mm; ⌀: 1,48 mm Mot: XU5M/J/JA/S/CP/JP, XU5 1C/2C XU7JB/JP, XU9S/J/JA/J4, XU9 2C 1,6-1,9 ltr. 53-116 kW (72-157 PS) BX, ZX, Xantia, Xsara, ab 07/1987➔
--

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*436.651*
--	------------------