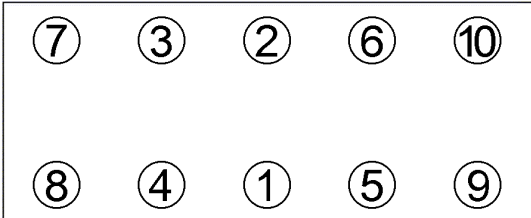


Anziehvorschrift für Zylinderkopf		490.011	 Das Original
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a PSA	
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
			
330.390 M 11x1,5x147			
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	Pos. 1-10: 20 Nm Pos. 1-10: 40 Nm Pos. 1-10: 130° Pos. 1-10: 130°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 74,7 mm; $\frac{1}{2}$: 1,30 mm			
Mot: DV4C 1.4 ltr HDi			
Peugeot 207, 208, 2008 Citroen C3, DS3 Ford Fiesta			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*490.011*	