



SUSPENSION

# **COMMON PROBLEMS**

### PREMATURE BEARING FAILURE

### **Probable cause**

#### Incorrect installation of the kit.

Failure is normally caused by the penetration of contaminants such as water and mud. It is important to replace all parts supplied in the kit, in the correct orientation.



The most common failure is normally caused by the two bearings and the two seals being installed backwards (see installation procedure).



- Install the bearing in the correct orientation: the black face of the bearing must sit against the filter unit.
- Install the seal in the correct orientation: the seal lip must sit against the filter unit.
- Take care not to deform or damage the seals during installation, do not lubricate the two assemblies excessively.

## **KIT INSTALLATION INSTRUCTIONS**





Install the bearing in the correct orientation: the metallic side should not visible









#### Install the seal in the correct orientation: the seal lip goes against the filter unit.



Fitting the filter unit into the mount



View of final assembly



# Recommendations

Follow the manufacturers installation procedures apply the tightening torques specified by the manufacturer.

Refer to the vehicle applications in our online catalogue: http://lc.cx/catalog-ra



Scan this QR code to access our online catalogue.

©NTN-SNR ROULEMENTS

The contents of this document are the copyright of the publisher and any reproduction, even partial, is prohibited without permission. Despite the care taken in preparing this document, NTN-SNR Roulements disclaims any liability for errors or omissions that may slip through, as well as for losses or direct or indirect damage arising from its use.



