



Anziehvorschrift für Zylinderkopf	135.052	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		

Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

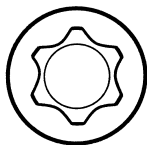

267.550
M 12x1,5x126

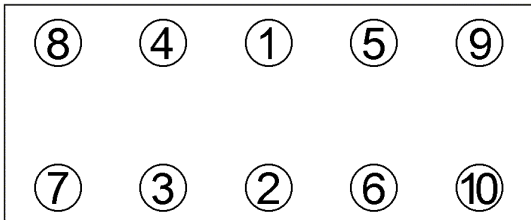

Anziehen/ Tightening/ Serrage/ Apriete	PSA DW10ATED4	PSA DW12TED4	Fiat, Ford, Volvo
✱	20 Nm	✱ 20 Nm	✱ 30 Nm
	60 Nm	60 Nm	60 Nm
☐	60 Nm	☐ 20 Nm	➤ 220°
➤	110°	60 Nm	
➤	110°	➤ 110°	
		➤ 110°	

Zeichenerklärung / Explanations / Explication / Explicacion

✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 86mm: ⚙: 1,25 mm; 1 Loch/hole

Mot: G6DA;G6DB;G6DC;G6DD;G6DE;G6DF;AZWA;
QXWA;QXWB, DW10ATED4;DW10BTED4;
DW12TED4;RHR;RHK/DW10UTED4,D4202T/T2

Focus/C-Max / 307,406,407,607,807
V40II,V50 / C4,C5,C8

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

135.052