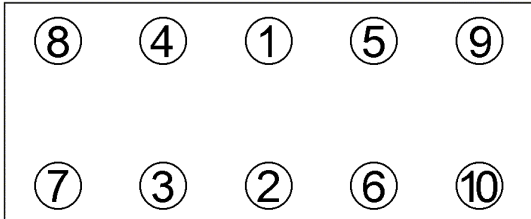


Anziehvorschrift für Zylinderkopf		153.142		
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a PSA, Fiat, Ford, Volvo		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
267.550 M 12x1,5x126				
Anziehen/ Tightening/ Serrage/ Apriete	PSA DW10ATED4 * 20 Nm 60 Nm 60 Nm 110° 110°	PSA DW12TED4 * 20 Nm 60 Nm 20 Nm 60 Nm 110° 110°	Fiat, Ford, Volvo * 30 Nm 60 Nm 220°	
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 86 mm: 𐀀: 1,35 mm; 3 Löcher/holes				
Mot: G6DA;G6DB;G6DC;G6DD;G6DE;G6DF;AZWA; QXWA;QXWB, DW10ATED4;DW10BTED4; DW12TED4;RHR;RHK/DW10UTED4,D4202T/T2				
Focus 2004/C-Max →10/03; 307,406,407,607 807; V40II,V50 →01/04; C4,C5,C8				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*153.142*	