


Anziehvorschrift für Zylinderkopf	569.802	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		


Schraubenkopf / Head shape
Tête de vis / Cabeza de tornillo

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

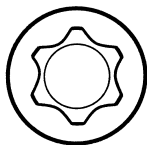

330.390

M 11x1,5x147

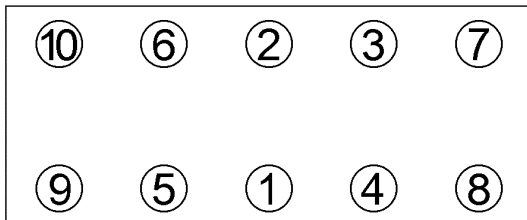

Anziehen/ * 20 Nm
Tightening/ 40 Nm
Serrage/ ► 260°
Apriete

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
►	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Dicke 1,35 mm 1 Kerbe
Ford: Fiesta/Fusion/Focus
1,6 TDCI 66KW/80KW
PSA: 206/307/407/C3/Berlingo/
C4/Xsara Picasso/C5
1,6 HDI 66KW/80KW
Mazda: 3 / 1,6 DI Turbo / 80kW

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

569.802