



Anziehvorschrift für Zylinderkopf		987.043 passend für / suitable for adaptable à / adaptable a Renault	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			

Schraubenkopf / Head shape
 Tête de vis / Cabeza de tornillo

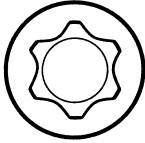

759.370
M 10 x 95/113

Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete

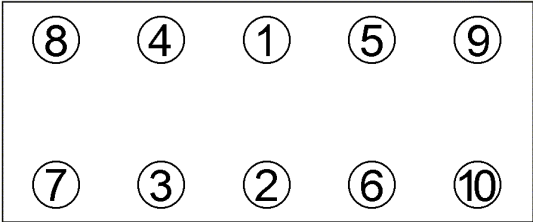

Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm ➤ 100° ± 6° ● 3 min Pos. 1 und 2: ☐ 20 Nm + 100°±6° Pos. 3-6: ☐ 20 Nm + 100°±6°	Pos. 7-10: ☐ 20 Nm + 100°±6°
---	---	--

Zeichenerklärung / Explanations / Explication / Explicacion

*	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor
 Ø: 77 mm, $\frac{1}{2}$: 1,43 mm

 Mot: E5F 710,716, E6J 700,701,706,712, 713,718,760, E7F 700,706, E7J 624 626,634,635,706,718,719,720,724, 726,728,742,745,754,780

 R19,Clio,Kangoo,Megane,Rapid

ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601	*987.043*
--	------------------