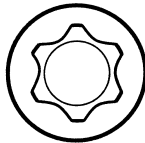
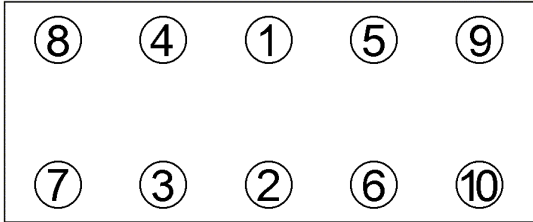


Anziehvorschrift für Zylinderkopf		153.200 passend für / suitable for adaptable à / adaptable a PSA	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 262.820 M11x1,5x141			
Anziehen/ Tightening/ Serrage/ Apriete	* 14 - 16 Nm 49 - 51 Nm □ 18 - 22 Nm ► 280° - 290°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ►	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor 1,8 Ltr. / 4 Zyl. / 85 kW / 116 PS Motor: EW7J4 406			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*153.200*	